

Robotino does not move

05/03/2024 12:54:08

[FAQ Article Print](#)

Category:	Customer Sol.	Votes:	0
State:	public (all)	Result:	0.00 %
Language:	en	Last update:	10:45:38 - 09/06/2022

Problem (public)

Problems:

- Could not drive Robotino with joysticks;
- Robotino is visible in FleetManager, but could not connect with it;
- Robotino is visible in RobotinoFactory, but could not be localised;
- The orange LED light lights up permanently;
- Stick sensor shows Error 4 and red LED is on.

Functioning parts:

- Robotino is reachable in net with ping;
- Robotino is visible in Fleet Manager Command Center, but two green status lights in Digital I/O are on.

Solution (public)

- Emergency Stop button is not released.
- Cables of DI/O, AI/O or relay are not connected properly.